




DFW-125

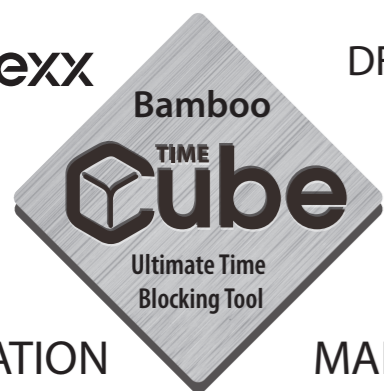



OPERATION

MANUAL


Before You Begin

Battery Installation:


1. Slide the battery cover to open

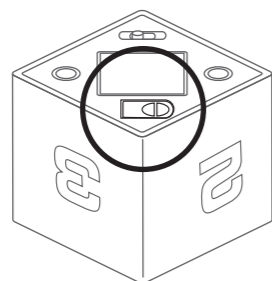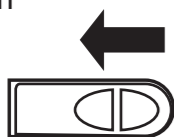

2. Insert one AAA battery, + side up


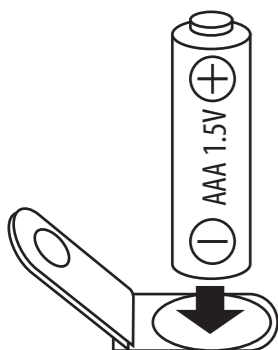


3. Close the battery cover

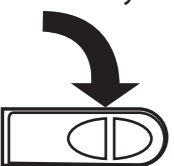


Let's Start

Power On:

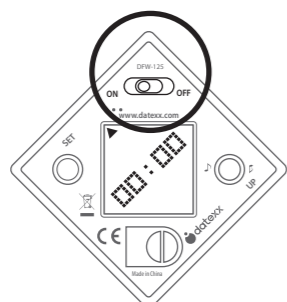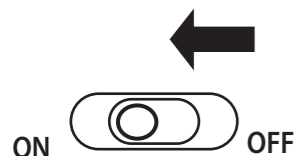

Select Alarm Sound:

1. Press the "UP" button twice to enter alarm tone selection mode.

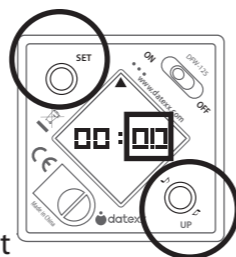

Then press the "UP" button again once, twice, or three times to select the type of alarm tone. Refer to the following chart for tone selection options:


1st		Long beep	
2nd		Double beep	
3rd		Triple beep	

2. Press the "SET" button to set





Start and Stop the Time Cube


1. To start countdown, turn the cube so that the desired countdown time faces up

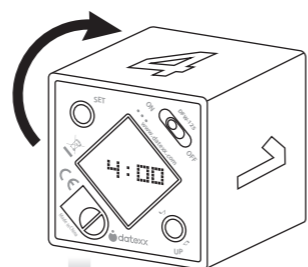

When the time is up

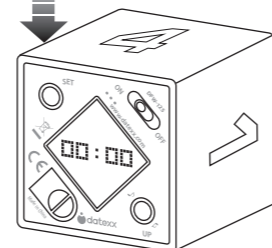 


2. To stop the alarm, turn the cube so that the blank top faces up

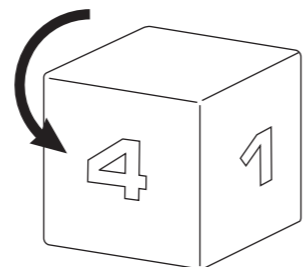

Programmable Countdown Time

Set the Programmable Timer


1. Turn the control panel side facing up

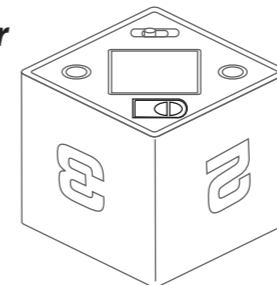

2. Press & hold "SET" button for 2 Seconds



3. LCD display will begin to flash

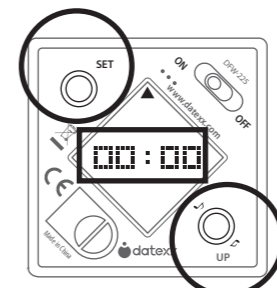

4. Press the "UP" button




Note:

- Press once to increase the time 5 seconds at a time
- Press and hold to fast forward

5. Press the "SET" button to save programmed time




6. Turn the cube so that the blank top faces up


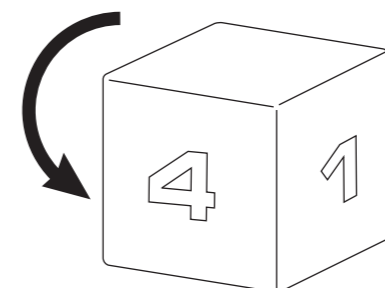


Start and Stop Programmed Countdown


1. To start countdown, turn the cube so that the control panel side faces up

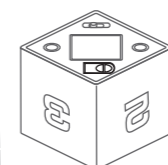

When the time is up

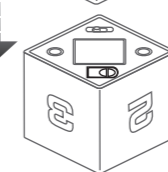 

2. To stop the alarm, turn the cube so that the blank top faces up

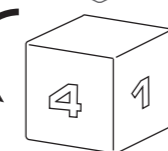

Note:

- To reset the programmed time, press both the "SET" and "UP" buttons at the same time
- The programmed time will remain in memory unless the time is reset or the batteries are removed

Specifications

- Power Source: 1 x AAA batteries (not included)
- Preset time: 1, 2, 3, 4 minutes
- Programmable time: 5 seconds to 99 minutes 55 seconds
- Alarm sound duration: 30 seconds
- Casing material: Real Bamboo

Caution:

- Do not throw the product into fire.
- Do not attempt to disassemble or alter the product.
- Do not immerse the product in water or other liquids.
- Do not use alcohol, benzene, or thinners to clean the product.
- To clean the product, wipe with a dry, soft cloth.
- To dispose this unit, please follow the disposal guidance of your local authorities.

Warranty

TELEDEX INC. warrants these products to the original purchaser to be free from defective material and workmanship. Under this warranty, the product will be repaired or replaced at our discretion, for up to one year without charge except for supplies or accessories such as batteries. Please email to: sales@datexx.com for return authorization. TELEDEX INC. 1 Atlas St. Kenilworth, NJ 07033

Thank you

Datexx would like to express our appreciation for your purchase by inviting you to register at www.datexx.com to receive a free extended warranty! Datexx registered members will also receive exclusive access to online sales and discounts throughout the year. We offer a wide variety of products that are great for gifts and your everyday life. Register Today!

Tell Us Why You Love TimeCube

- sales@datexx.com
- [facebook/datexxinc](https://www.facebook.com/datexxinc)
- [twitter/datexxinc](https://twitter.com/datexxinc)
- [instagram/datexxinc](https://www.instagram.com/datexxinc)



www.datexx.com

